



Documentation for
Ray-Vin.Com
AR Wedge

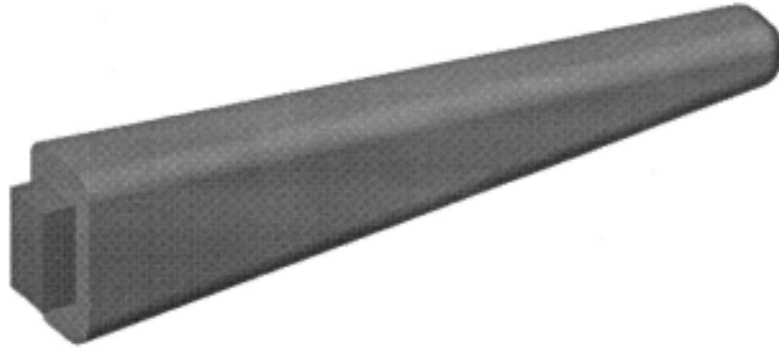

We made our first wedge
on the Friday after Thanksgiving 1995.

AR Wedge Installation:

1. **Clear the weapon!**
2. Remove the butt plate from the rifle.
3. Align the large corner radius on the weight to the bottom of the accessories pocket and drop it in.
4. Replace the butt plate.
5. Close the trap door against the foam compression piece to prevent the weight from working back and forth. If no foam is supplied, pack some cleaning patches between the door and the wedge.
6. Should you need to reduce the weight of the ballast, use a wood saw to cut slabs from the narrow end only! Refer to the diagram below to estimate weight removed.

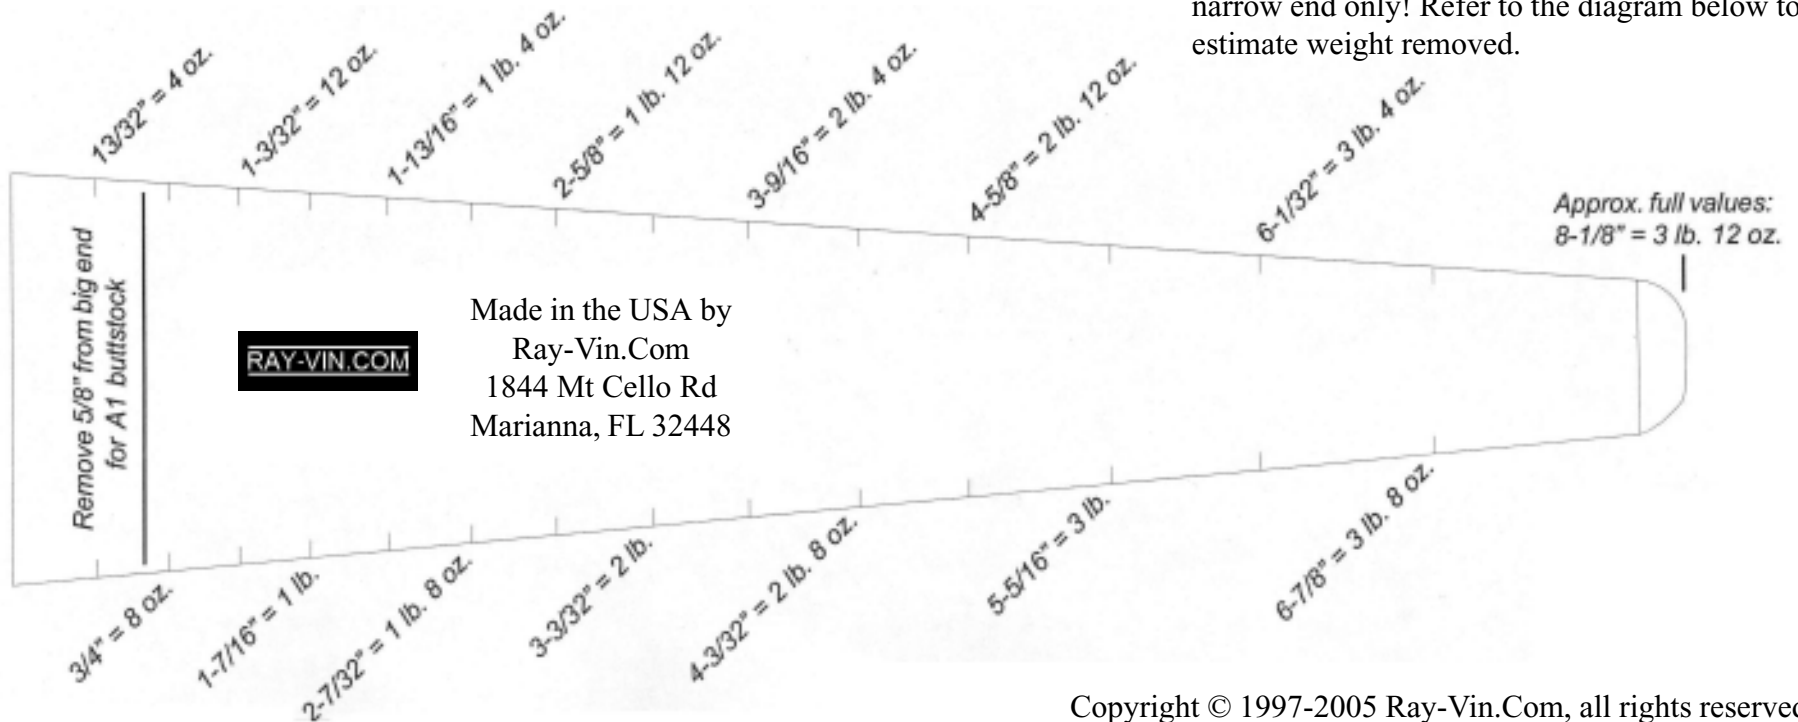

Made in the USA by
Ray-Vin.Com
1844 Mt Cello Rd
Marianna, FL 32448

RAY-VIN.COM